



(If internal schematic of the switch is not shown, the image of the switch represents the back view of the connector as it is connected to the switch.)

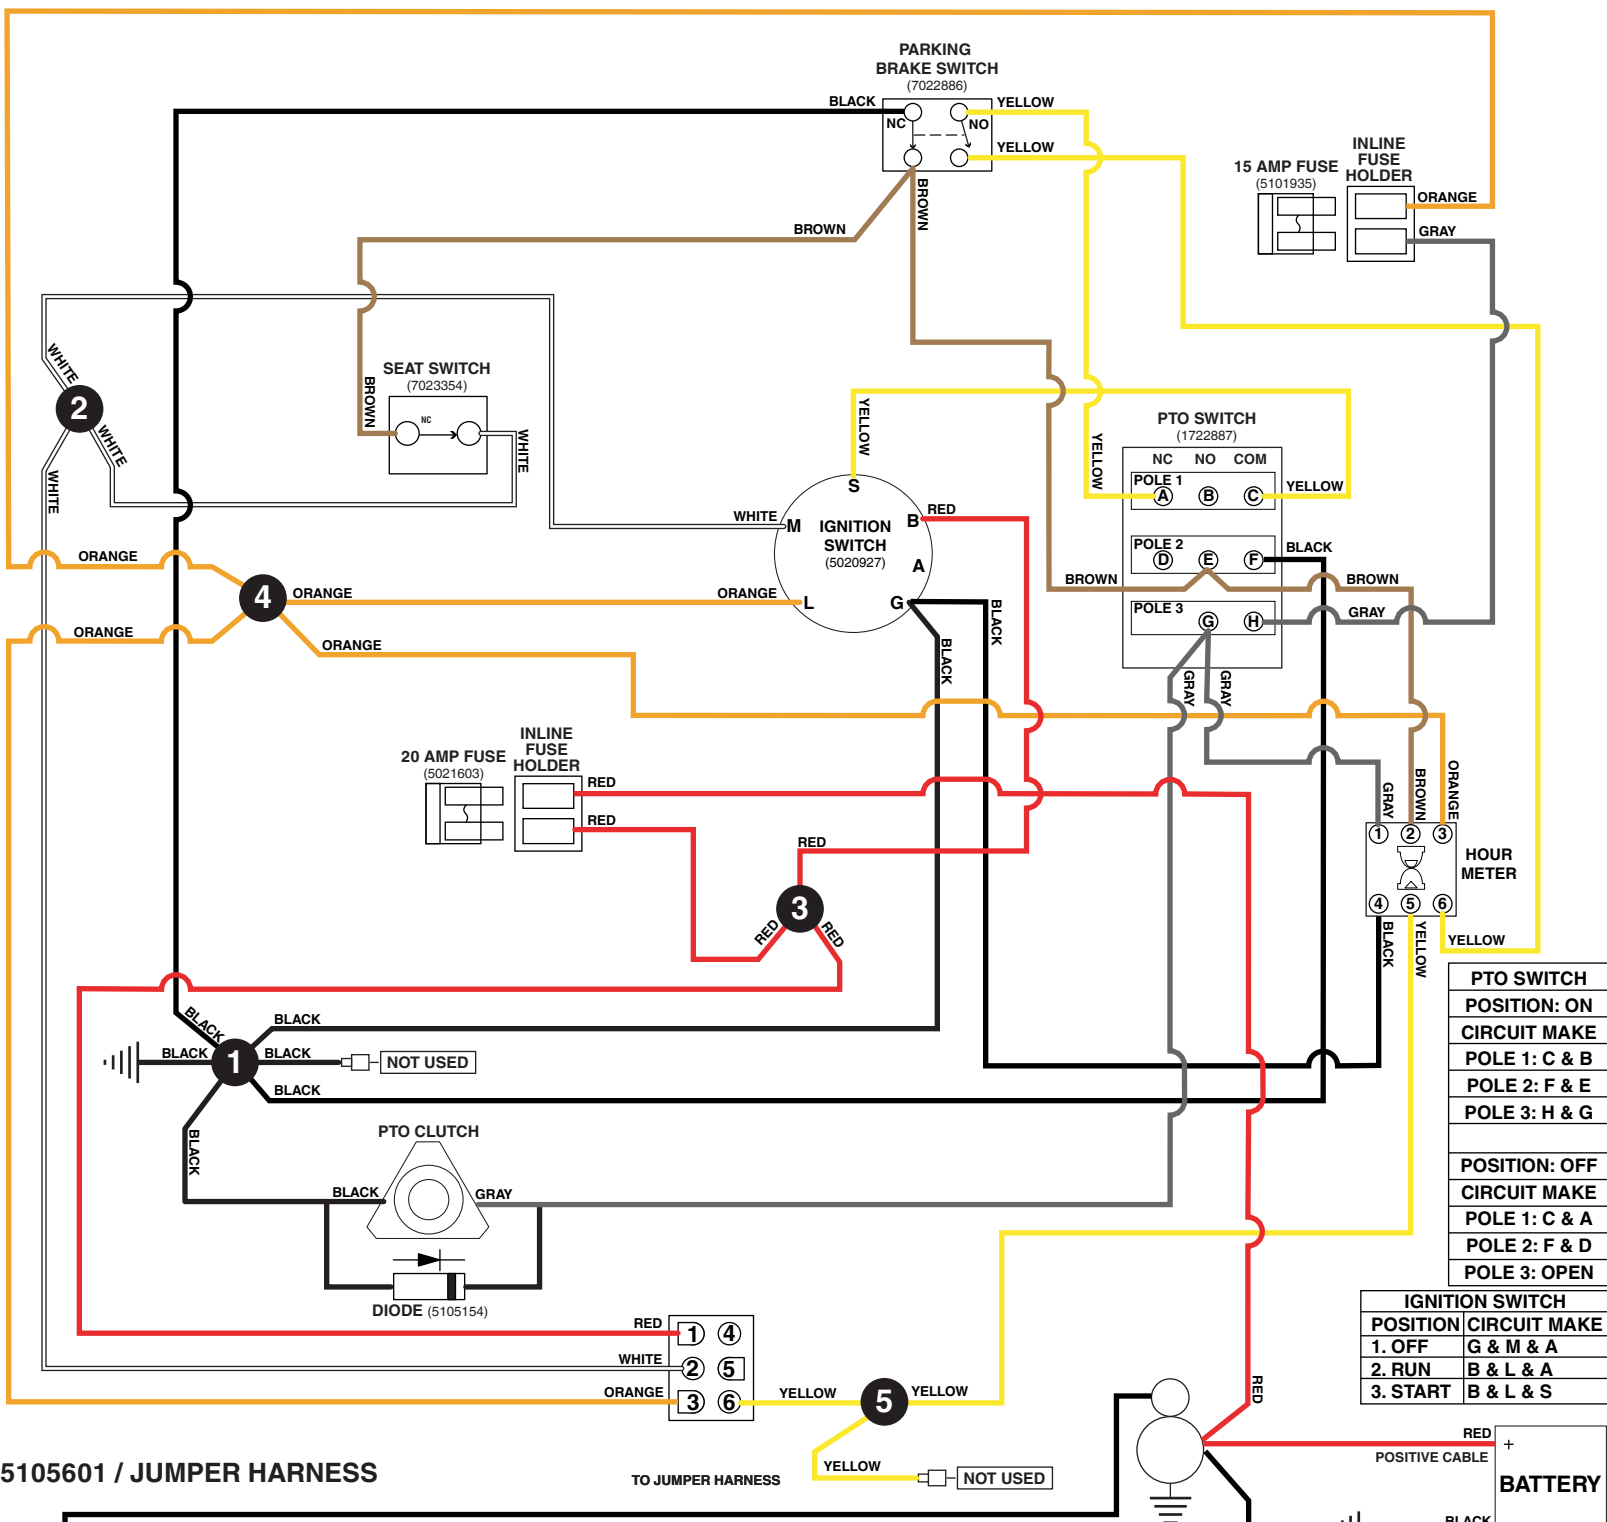

PTO SWITCH	
POSITION:	CIRCUIT MAKE
ON	POLE 1: C & B
OFF	POLE 2: F & E
	POLE 3: H & G

IGNITION SWITCH	
POSITION	CIRCUIT MAKE
1. OFF	G & M & A
2. RUN	B & L & A
3. START	B & L & S

5105601 / JUMPER HARNESS

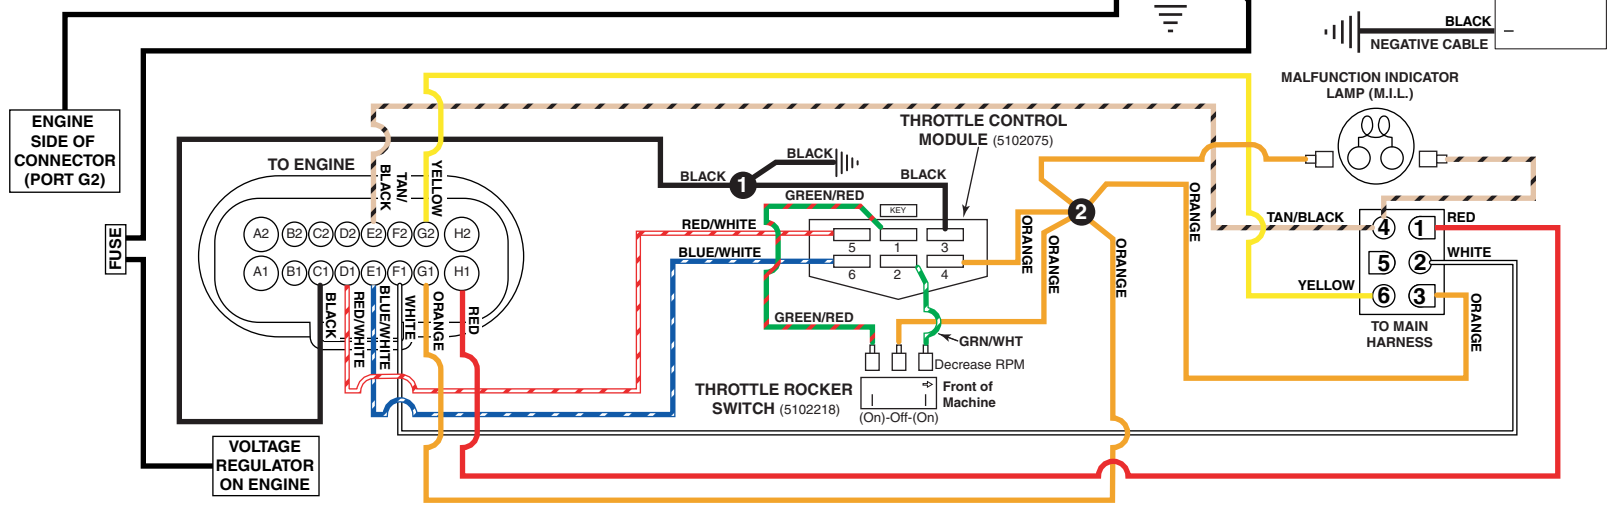

ENGINE SIDE OF CONNECTOR (PORT G2)

VOLTAGE REGULATOR ON ENGINE

THROTTLE CONTROL MODULE (5102075)

THROTTLE ROCKER SWITCH (5102218) (On)-Off-(On)

MALFUNCTION INDICATOR LAMP (M.I.L.)

BATTERY
 + POSITIVE CABLE (RED)
 - NEGATIVE CABLE (BLACK)